




How to adjust transom splits on the Classic Heritage Door

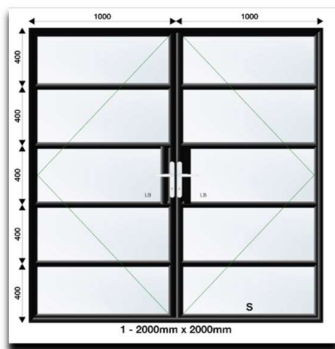


Getting your transom heights to work on the Classic Heritage door can appear to be a little awkward, so we have put together this guide to explain exactly what you need to do.

When you type your dimensions in, two errors will appear.

Both of these errors are because bottom split is defaulting to 850mm (default midrail height across all products).

Type	Message
ERROR	Min. centres between lockbox transoms at 400mm (#12881)
ERROR	Match splits for top 2 and btm 2 panes (#12881)

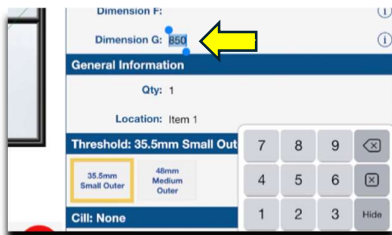

All you have to do is tap on the “850”, so that the keypad appears.

Then, simply tap backspace followed by enter.

That has equalised the splits, so now you are ready to finish designing your Classic Heritage Door!

ADDITIONAL SUPPORT


w: www.listerwindows.co.uk/easy-connect

e: easyconnect@listerwindows.co.uk t: 01268 775566 (Essex), 01782 391900 (Stoke)

Page 1 of 2

If this error now appears (right), that is because on smaller heights, equalising the splits may cause the centre split to be below the 400mm minimum.



Type	Message
ERROR	Min. centres between lockbox transoms at 400mm (#12881)

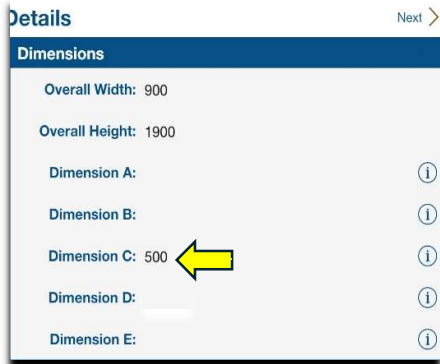

Input your desired size into the middle split dimension – Making sure it is 400mm or above.

The system will then automatically add a number into one of the other split dimensions, which will cause an error to appear as the lockbox must be central.

To get beyond this, simply tap on the number, then backspace, followed by enter.

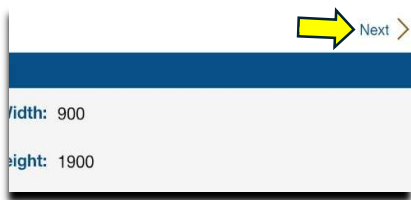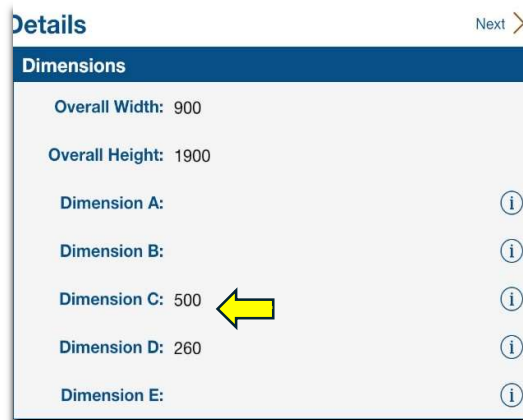

The error won't disappear immediately, but don't worry!

Just click next in the top right corner of the screen and then the splits will update.

You are now ready to go!



ADDITIONAL SUPPORT

www: www.listerwindows.co.uk/easy-connect

e: easyconnect@listerwindows.co.uk t: 01268 775566 (Essex), 01782 391900 (Stoke)